


ASSEMBLY INSTRUCTIONS FOR Felix LED Wall Washer

Model # 3607-21
3607-22

3607-21 1.0
3607-22

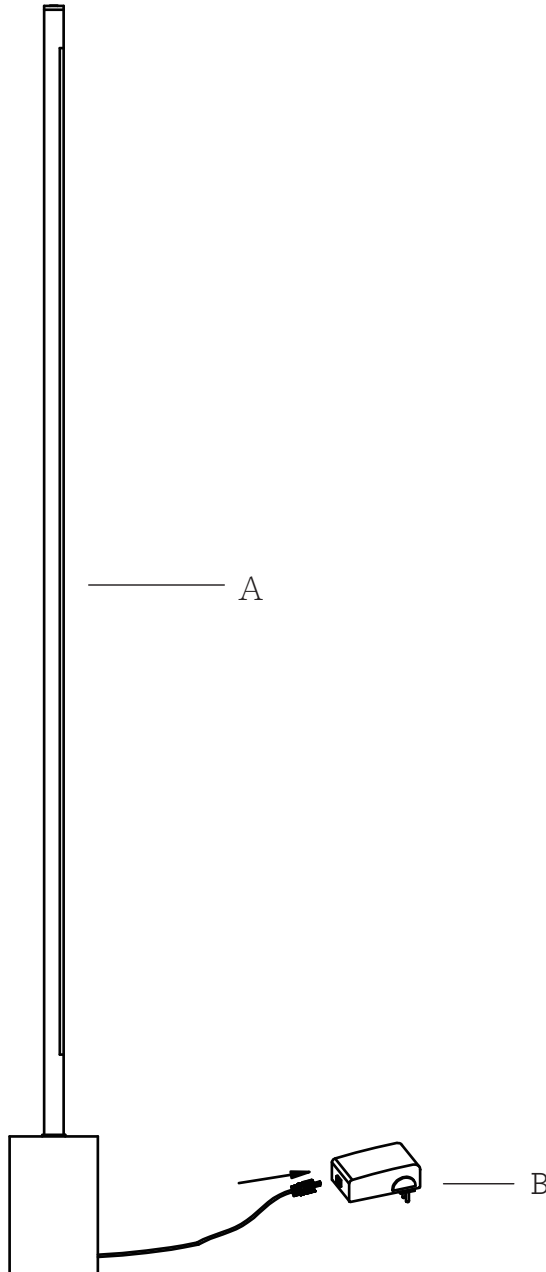

1. Remove all parts and lay on a flat surface.
2. Assemble the transformer (B) and plug in.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 30 watt LED included

PARTS DIAGRAM:

- (1) Transformer (B)